


MD2U Series 2-Phase Unipolar Stepper Motor Driver

Compact And High-Performance Of 2-Phase Stepper Motor Driver


■ Features

- Unipolar constant current drive type
- Enable to brake when it stops by STOP current adjustment
- Low speed and precise control with microstep (MD2U-MD20)
- Insulate using photocoupler to minimize the influence by external noise
- Power supply: 24-35VDC

⚠ Please read "Caution for your safety" in operation manual before using.

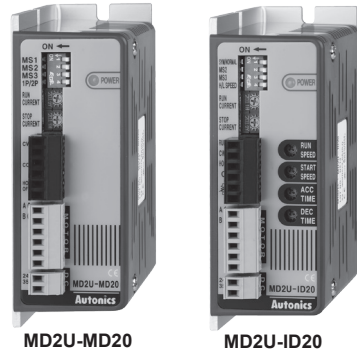

■ Ordering Information

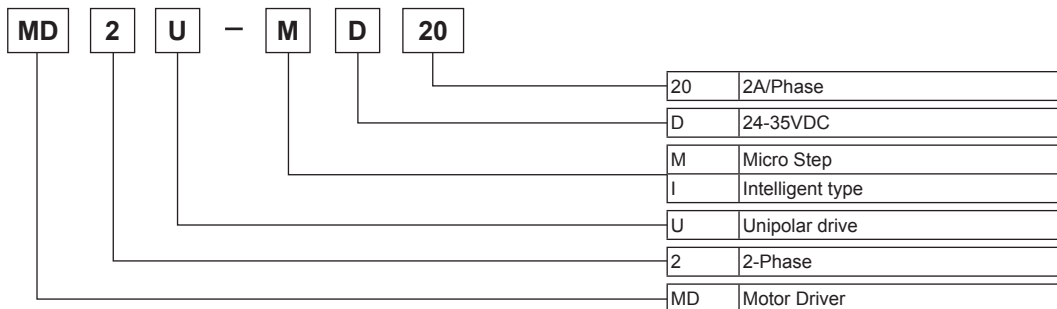

■ Specifications

Model	MD2U-MD20	MD2U-ID20	
Power supply ^{※1}	24-35VDC		
Allowable voltage range	80 to 120% of the rated voltage		
RUN current ^{※2}	0.5 to 2A / Phase		
Drive method	Unipolar constant current drive type		
Current consumption ^{※3}	Max. 3A		
Resolution	1, 2, 4, 5, 8, 10, 16, 20 division ^{※3}	—	
Input pulse spec.	Input pulse width	Min. 10μs	
	Pulse duty	Max. 50%	
	Rising/falling time	Max. 0.5μs	
	Pulse input voltage	[H] 4-8VDC, [L] 0-0.5VDC	
	Max. input pulse frequency	Max. 50kHz ^{※4}	
Input resistance	300Ω (CW, CCW), 390Ω (HOLD OFF)	3.3kΩ (CW/CCW, RUN/STOP, HOLD OFF)	
Insulation resistance	Min. 200MΩ (based on 500VDC of electrification and non-electrification parts)		
Dielectric strength	1000VAC 60Hz for 1 minute (between electrification and non-electrification parts)		
Noise resistance	±500V the square wave noise (pulse width: 1μs) by the noise simulator		
Vibration	1.5mm amplitude or 300m/s ² at frequency of 10 to 55Hz (for 1 min.) in each X, Y, Z direction for 2 hours		
Shock	Vibration	300m/s ² (approx. 30G) in each X, Y, Z direction for 3 times	
Environment	Ambient temperature	0 to 50°C, storage: -20 to 60°C	
	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH	
Approval	CE		
Weight ^{※5}	Approx. 295g (approx. 180g)	Approx. 303g (approx. 190g)	

※1: When using over 30VDC, it should be mounted at a well-ventilated place due to increasing heat.

※2: The max. value of RUN current is based on RMS value in accordance with frequency of running motor, peak power can be changed by load fluctuation.

※3: Ambient temperature is 25°C and ambient humidity is 55%RH.

※4: It can be changed by pull-out frequency and max. slewing frequency range.

※5: The weight includes packaging. The weight in parentheses is for unit only.


※Environment resistance is rated at no freezing or condensation.

(A)	Photoelectric Sensors
(B)	Fiber Optic Sensors
(C)	Door/Area Sensors
(D)	Proximity Sensors
(E)	Pressure Sensors
(F)	Rotary Encoders
(G)	Connectors/ Sockets
(H)	Temperature Controllers
(I)	SSRs / Power Controllers
(J)	Counters
(K)	Timers
(L)	Panel Meters
(M)	Tacho / Speed / Pulse Meters
(N)	Display Units
(O)	Sensor Controllers
(P)	Switching Mode Power Supplies
(Q)	Stepper Motors & Drivers & Controllers
(R)	Graphic/ Logic Panels
(S)	Field Network Devices
(T)	Software

MD2U Series

2-Phase Micro Stepper Driver [MD2U-MD20]

■ Unit Descriptions

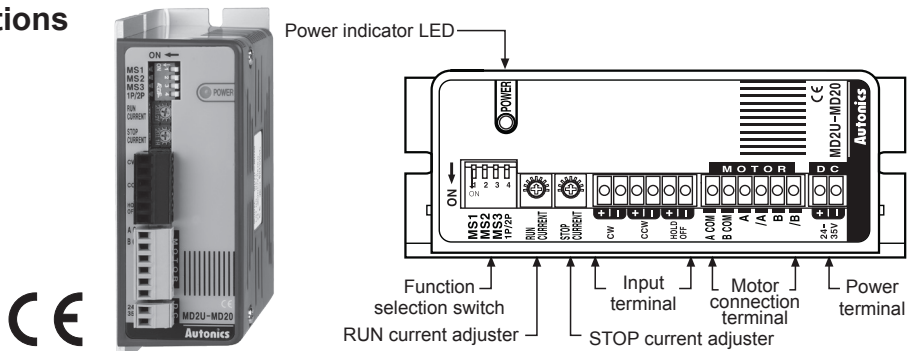

◎ Function selection switch

● Microstep, pulse input mode setting

	No.	Name	Function	Switch position				
				ON	OFF			
	1	MS1	Microstep setting	MS1	MS2	MS3	Resolution	
				ON	ON	ON	1 (Full-step)	
				ON	ON	OFF	2-division	
				ON	OFF	ON	4-division	
				ON	OFF	OFF	5-division	
				OFF	ON	ON	8-division	
				OFF	ON	OFF	10-division	
				OFF	OFF	ON	16-division	
	3	MS3		OFF	OFF	OFF	20-division	
				4	1P/2P	Pulse input mode	1 Pulse method	2 Pulse method

● Resolution setting (MS1/ MS2/ MS3)

※A switch to select micro step angle to drive a motor.

※Micro stepper is to make basic step angle of 2-phase motors (1.8°) divided into smaller angle according to setting values.

※The formula for microstep angle is;

$$\text{Rotation angle per pulse of 2-phase [} ^\circ \text{]} = \frac{1.8^\circ}{\text{Resolution}}$$

※It may cause step-out if resolution is changed while motor is running.

● 1P/2P

※A switch to select pulse input type


※1-pulse input mode

CW: Operation command pulse input, CCW: Rotation direction pulse input ([H]: CW, [L]: CCW)

※2-pulse input mode

CW: CW direction rotation pulse input, CCW: CCW direction rotation pulse input

◎ RUN current setting

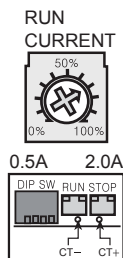

※RUN current is a phase current provided to 2-phase stepper motor.

※Be sure to set RUN current at the rated current or below. If not, it may cause heat generation, loss of torque or step-out.

※RUN current setting range: 0.5 to 2.0A

※RUN current setting: Measure the voltage by connecting a DC voltage meter to both CT+ and CT- terminals while the motor is running (Max. 150rpm)

E.g.) Input Voltage (3V) × 2 / 3 = 2A (Motor's excitation current)


※Adjust the RUN current in case severe heat generation occurs.

Be sure that torque decreasing may occur when adjusting the current.

Note) Be sure to adjust RUN current while motor is running.

2-Phase Unipolar Stepper Motor Driver

◎ STOP current setting

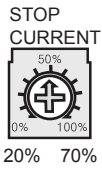


- ※ Stop current is a phase current provided to 2-phase stepper motor at standstill.
 - ※ A function to reduce the current in order to suppress the heat generation at motor standstill / Use variable resistance ratio within 0 to 100% of RUN current to set STOP current (Actual setting range is 20 to 70% of RUN current).
E.g.) If RUN current setting value is 2A and STOP current setting value is 0%, STOP current will be set to 0.4A.
 - ※ STOP current setting value may have some deviation depending on resistance impedance of motor.
 - ※ Auto current down function will be activated when HOLD OFF signal is [L]. When HOLD OFF signal is [H], the function is not activated since the current provided to each phase is cut off.
- Note) Be sure to adjust STOP current while motor is at standstill.

◎ HOLD OFF function

- ※ When HOLD OFF input signal is [H], motor excitation is released.
- When HOLD OFF input signal is [L], motor excitation is in a normal status.
- ※ A function used to rotate motor's axis using external force or used for manual positioning.
- ※ HOLD OFF Input signal [H] and [L] represent photocoupler ON/OFF in a circuit.
- ※ Please do not use for stopping motor.

■ Input-Output Diagram And Connections

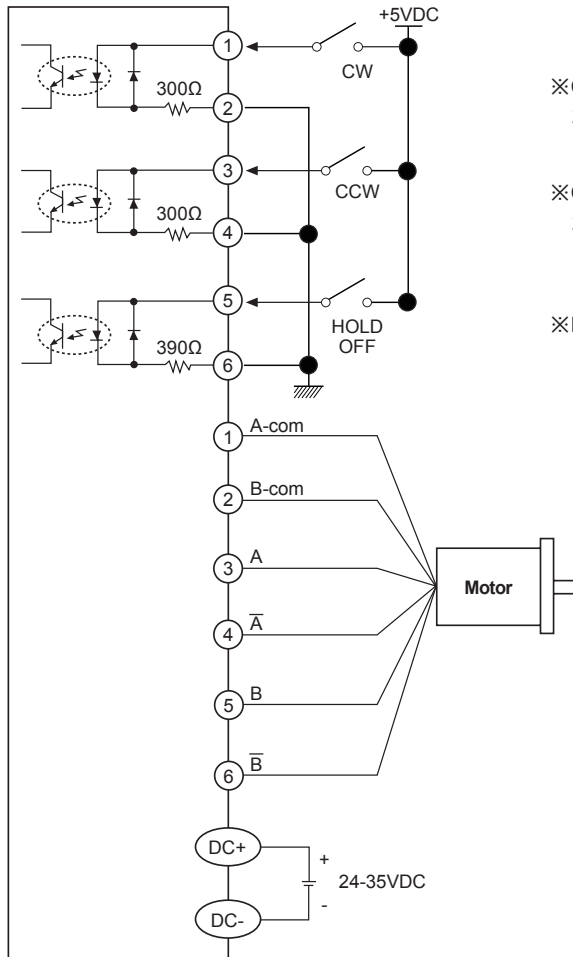

- ※ CW
2-pulse input mode - CW direction rotation pulse input
1-pulse input mode - Operation command pulse input
- ※ CCW
2-pulse input mode - CCW direction rotation pulse input
1-pulse input mode - Rotation direction pulse input
[H]: CW, [L]: CCW
- ※ HOLD OFF
Motor excitation OFF control signal
[H]: Motor excitation OFF


Note) Add external resistance when power for pulse from the external of the unit exceeds +5V.
(Input power: Max. 24VDC, Input current: 10 to 20mA)

(A)	Photoelectric Sensors
(B)	Fiber Optic Sensors
(C)	Door/Area Sensors
(D)	Proximity Sensors
(E)	Pressure Sensors
(F)	Rotary Encoders
(G)	Connectors/ Sockets
(H)	Temperature Controllers
(I)	SSRs / Power Controllers
(J)	Counters
(K)	Timers
(L)	Panel Meters
(M)	Tacho / Speed / Pulse Meters
(N)	Display Units
(O)	Sensor Controllers
(P)	Switching Mode Power Supplies
(Q)	Stepper Motors & Drivers & Controllers
(R)	Graphic/ Logic Panels
(S)	Field Network Devices
(T)	Software


MD2U Series

Time Chart

• 1 Pulse input

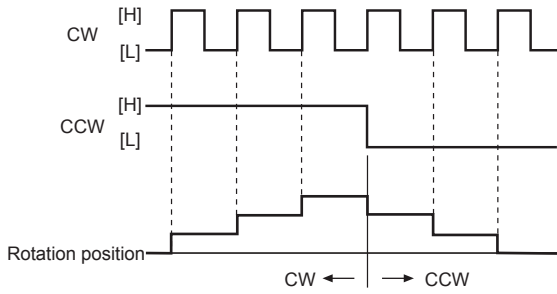


• 2 Pulse input

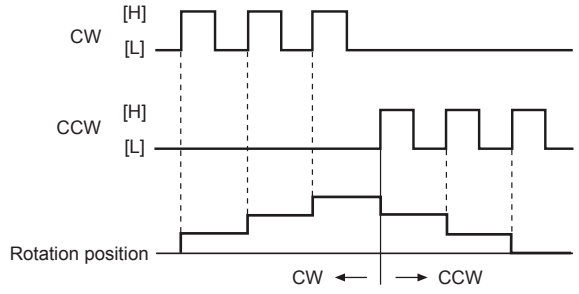

Dimensions


(unit: mm)

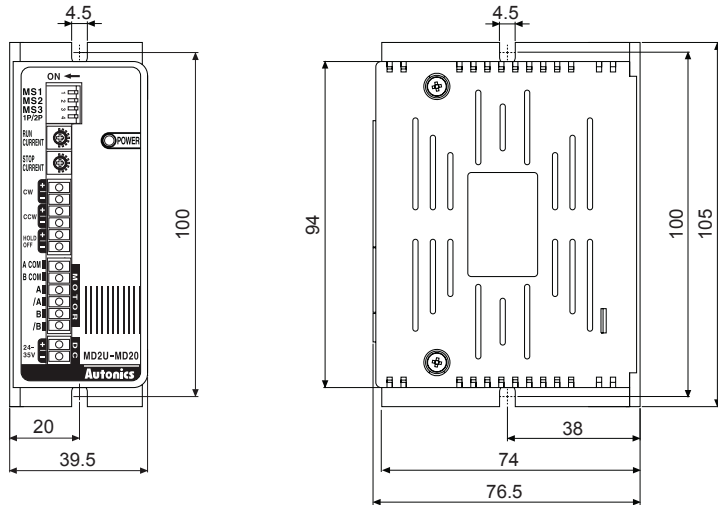

2-Phase Unipolar Intelligent Stepper Motor Driver

2-Phase Intelligent Stepper Motor Driver [MD2U-ID20]

Unit Descriptions

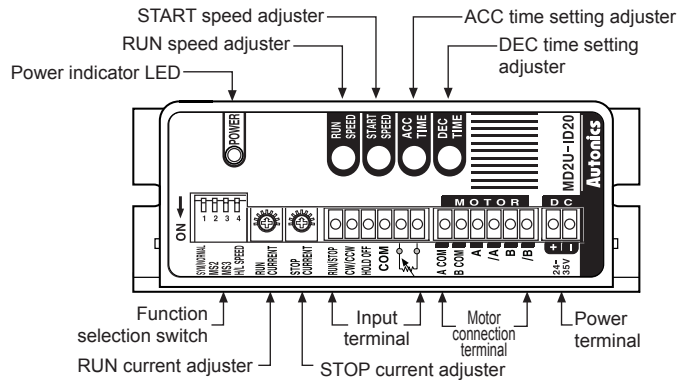

Intelligent type stepper motor driver?

MD2U-ID20 is an intelligent type stepper motor driver including all features to control 2-phase stepper motors so that no controllers are required.

- Realizing AC motor's driving features to stepper motors
- Controlling START speed, RUN speed and ACC/DEC speed
- User-friendly design to realize various functions (front switch and volume)

Function selection switch



S/W No.	1	2	3	4	Max. speed (rpm)
Name	SYM/NORMAL	MS2	MS3	H/L SPEED	
Switch	ON: Symmetry	ON	ON	ON: High speed	1500
	OFF: Asymmetry (Normal)	ON	OFF		1350
		OFF	ON		1000
		OFF	OFF	500	
	D ^{※1}	D ^{※1}	D ^{※1}	OFF: Low speed	150

※1: D=Don't care

※Reset the power after changing function selection switch operations.

Selection of Symmetry/Asymmetry

※A function to make the ACC/DEC time of run-speed as asymmetry or symmetry using DIP switch No. 1.

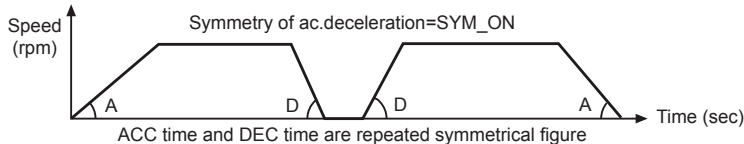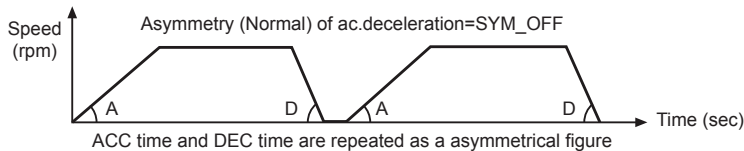

※It is able to set the gradient (acceleration and deceleration time) as ACC/DEC time.

Selection of max. speed (MS2, MS3)

- ※A function to select the max. speed of motors.
- ※The max. speed of stepper motor is changed by MS2/MS3 and Hi/Low speed.
- ※The features of run and vibration are able to change depending on MS2, MS3.
- ※Lower the max. speed to run a motor smoothly.

Selection of H/L SPEED

※H/L SPEED mode selection switch: Ac.deceleration control is not available in Low speed mode since all sections are included in Pull-in range.


※Low speed mode: It is able to drive a motor up to 150rpm of max. drive speed.

※High speed mode: It is able to drive a motor up to 1500rpm of max. drive speed.

- (A) Photoelectric Sensors
- (B) Fiber Optic Sensors
- (C) Door/Area Sensors
- (D) Proximity Sensors
- (E) Pressure Sensors
- (F) Rotary Encoders
- (G) Connectors/ Sockets
- (H) Temperature Controllers
- (I) SSRs / Power Controllers
- (J) Counters
- (K) Timers
- (L) Panel Meters
- (M) Tacho / Speed / Pulse Meters
- (N) Display Units
- (O) Sensor Controllers
- (P) Switching Mode Power Supplies
- (Q) Stepper Motors & Drivers & Controllers
- (R) Graphic/ Logic Panels
- (S) Field Network Devices
- (T) Software


MD2U Series

◎ RUN current setting

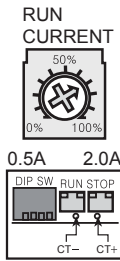

- ※RUN current is a phase current provided to 2-phase stepper motor.
- ※Be sure to set RUN current at the rated current or below. If not, it may cause heat generation, loss of torque or step-out.
- ※RUN current setting range: 0.5 to 2.0A
- ※RUN current setting: Measure the voltage by connecting a DC voltage meter to both CT+ and CT- terminals while the motor is running (Max. 150rpm).
E.g.) Input Voltage (3V) × 2 / 3 = 2A (Motor's excitation current)
- ※Adjust the RUN current in case severe heat generation occurs.
Be sure that torque decreasing may occur when adjusting the current.
- Note) Be sure to adjust RUN current while motor is running.

◎ STOP current setting

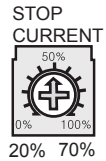


- ※Stop current is a phase current provided to 2-phase stepper motor at standstill.
- ※A function to reduce the current in order to suppress the heat generation at motor standstill / Use variable resistance ratio within 0 to 100% of RUN current to set STOP current (Actual setting range is 20 to 70% of RUN current).
E.g.) If RUN current setting value is 2A and STOP current setting value is 0% (Actual setting value is 20%), STOP current will be set to 0.4A.
- ※STOP current setting value may have some deviation depending on resistance impedance of motor.
- ※Auto current down function will be activated when HOLD OFF signal is [L]. When HOLD OFF signal is [H], the function is not activated since the current provided to each phase is cut off.
- Note) Be sure to adjust STOP current while motor is at standstill.

◎ RUN speed setting




- ※It sets max. RUN speed.
- ※Max. RUN speed can be different depending on max. speed setting (MS2, MS3) and driving mode setting (Hi/Low speed).
- ※Consider motor type and its RUN current when setting max. RUN speed. Missing step could occur due to max. input pulse frequency of motors.
- ※Set the value when the motor stops.

◎ START speed setting

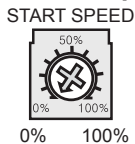

- ※It sets desired START speed.
- ※Max. START speed value is same with RUN speed value.
- ※START speed must be set within max. starting frequency. It is recommended to set up START speed within 0 to 50% for stable driving.
- ※Set the value when the motor stops.

◎ ACC time setting

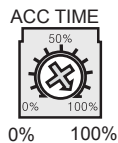

- ※It sets the acceleration time from START speed to max. driving speed.
- ※AT_1 operation mode when ACC time is under 33.3%, AT_2 operation mode when ACC time is under 66.6% and AT_3 operation mode when ACC time is over 66.6%.
- ※AT_1 is 0.5 sec. when RUN speed=100%, START speed=0%.
- ※AT_2 is 1 sec. when RUN speed=100%, START speed=0%.
- ※AT_3 is 2 sec. when RUN speed=100%, START speed=0%.
- ※Set the value when the motor stops.

◎ DEC time setting



- ※It sets the deceleration time from max. RUN speed to STOP.
- ※DT_1 operation mode when DEC time is under 33.3%, DT_2 operation mode when DEC time is under 66.6% and DT_3 operation mode when DEC time is over 66.6%.
- ※DT_1 is 0.5 sec. when RUN speed=100%, START speed=0%.
- ※DT_2 is 1 sec. when RUN speed=100%, START speed=0%.
- ※DT_3 is 2 sec. when RUN speed=100%, START speed=0%.
- ※Set the value when the motor stops.

※ACC Time and DEC Time are declined in proportion to the setting value of START speed.

※The figures above indicate the factory default for each value.


◎ HOLD OFF function

- ※When HOLD OFF input signal is [H], motor excitation is released.
When HOLD OFF input signal is [L], motor excitation is in a normal status.
- ※A function used to rotate motor's axis using external force or used for manual positioning.
- ※HOLD OFF input signal [H] and [L] represent Photocoupler ON/OFF in a circuit.
- ※Please do not use for stopping motor.

2-Phase Unipolar Intelligent Stepper Motor Driver

Time Chart

High speed mode

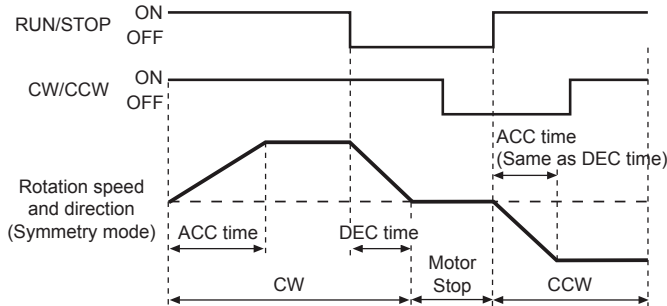


It accelerates up to RUN speed during ACC time after RUN signal is ON and decelerates during DEC time after it is OFF. It is disable to change the direction during the signal is ON and it takes 0.5sec. for deceleration when DEC time is "0%".

Low speed mode

Max. RUN speed is 150rpm and ACC and DEC time are not available. It is same with High speed to change RUN/STOP and direction.

Input-Output Diagram And Connections

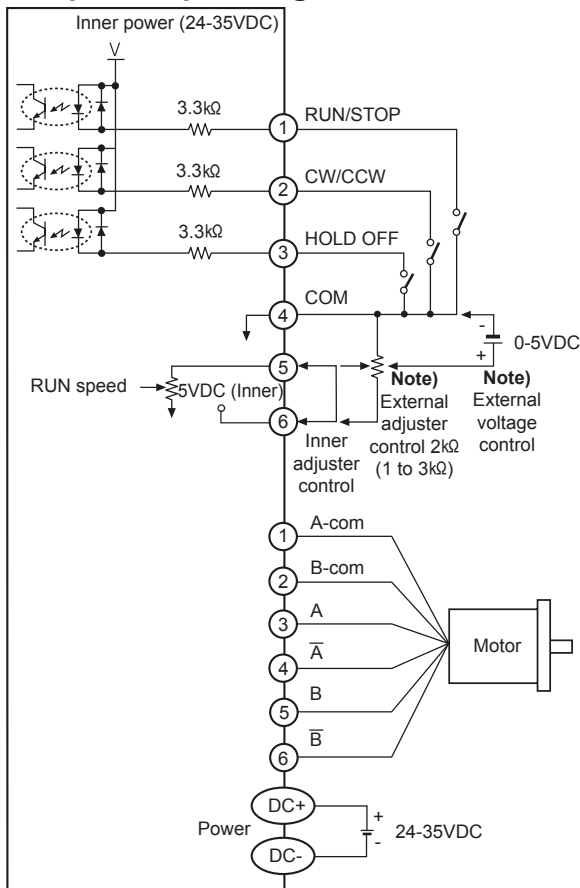


RUN/STOP signal input
→ [ON]: RUN, [OFF]: STOP

Direction signal input
→ [ON]: CW, [OFF]: CCW

HOLD OFF signal input
→ [ON]: HOLD OFF, [OFF]: HOLD ON


Inner adjuster control (Adjusting RUN speed with front VR)

Make the connection between terminal No.5 and No.6.

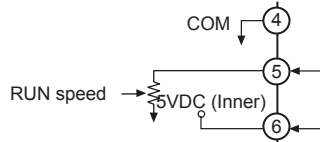


External adjuster control (Adjusting RUN speed with connecting external variable resistance)

Connect variable resistance 2kΩ (1 to 3kΩ) for external adjuster control. If variable resistance is too low, full range setting might not be possible. Make sure to adjust RUN speed VR to maximum for external adjuster control.

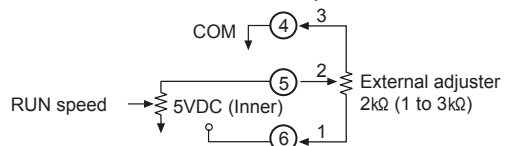

External voltage control (Adjusting RUN speed with external voltage input)

Make sure to adjust RUN speed VR to maximum external voltage control.

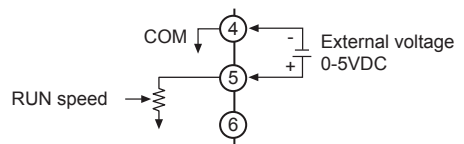


Note Inner adjuster is correlated to external adjuster control and external voltage control. Make sure that inner adjuster must be set to maximum in order to set maximum RUN speed using external adjuster and external voltage.

- (A) Photoelectric Sensors
- (B) Fiber Optic Sensors
- (C) Door/Area Sensors
- (D) Proximity Sensors
- (E) Pressure Sensors
- (F) Rotary Encoders
- (G) Connectors/ Sockets
- (H) Temperature Controllers
- (I) SSRs / Power Controllers
- (J) Counters
- (K) Timers
- (L) Panel Meters
- (M) Tacho / Speed / Pulse Meters
- (N) Display Units
- (O) Sensor Controllers
- (P) Switching Mode Power Supplies
- (Q) Stepper Motors & Drivers & Controllers
- (R) Graphic/ Logic Panels
- (S) Field Network Devices
- (T) Software

MD2U Series

■ Dimensions

(unit: mm)

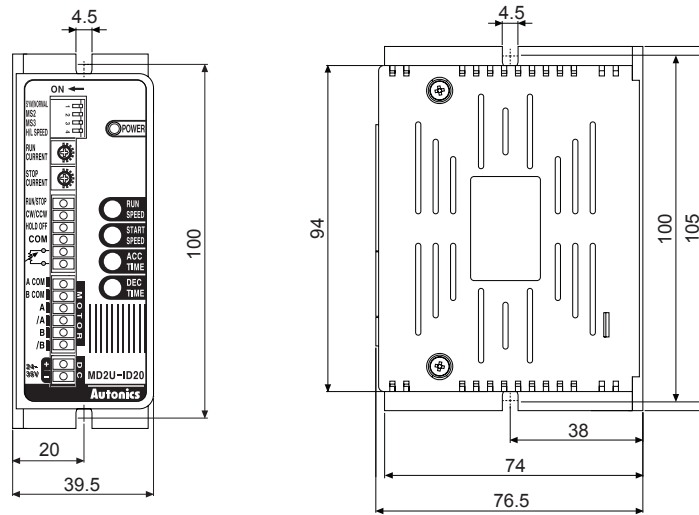

■ Proper Usage

◎ Failure diagnosis and management

- Check the connection of controller and driver, if motor does not rotate.
- Check the DIR input of driver, if motor rotates as a reverse direction, it is CW for [ON] and CCW for [OFF].
- If motor does not work properly,
 - Check the connection of driver and motor.
 - Check driver output current and RUN current of motor depending on current adjuster are correct.

◎ Caution during use

- Caution for signal input
 - When using the 2 pulse input method, do not input CW and CCW at the same time, or it may cause malfunction. (MD2U-MD20)
 - Direction cannot be changed during the operation. (MD2U-ID20)
 - In case, the signal input supply is higher than rated supply expressed on the specification, please connect the additional resistance to external part.
- Caution for setting the RUN and STOP current
 - Run current must be set under a rated current of the motor because motor emits heat too much when a RUN current is set over a rated current of the motor.
- Caution for wiring
 - Use twisted pair (Over 0.2mm^2) for the signal wire should be shorter than 2m.
 - Please use an electric wire thicker than the motor lead wire when lengthening the motor wire connection.
 - Please leave a space over 10cm between a signal wire connection and power wire.
- Caution for installation
 - Keep the heat sink as close as possible to metal panels and place the unit in well-ventilated area in order to increase heat protection efficiency of heat sink.
 - Heat generation may occur on drivers depending on installation environments. Place the unit with keeping the heat sink under 80°C .
- Caution for using function switch
 - When the input switch is changed to 2P input method during the operation, it may be danger as the motor is rotated reversely. Please do not change the input signal method and resolution during the operation.
- Motor vibration and noise can occur in specific frequency period.
 - Motor vibration and noise can be lowered by changing motor installation or attaching damper.
 - Use the unit in a range without vibration and noise by RUN speed adjustment or microstep. (MD2U-MD20)
 - Use the unit a range without vibration and noise range by RUN speed adjustment. (MD2U-ID20)
- This unit may be used in the following environments.
 - Indoor
 - Altitude: Under 2,000m
 - Pollution degree 2
 - Installation category II